



1/16" PLY  
Nose ring

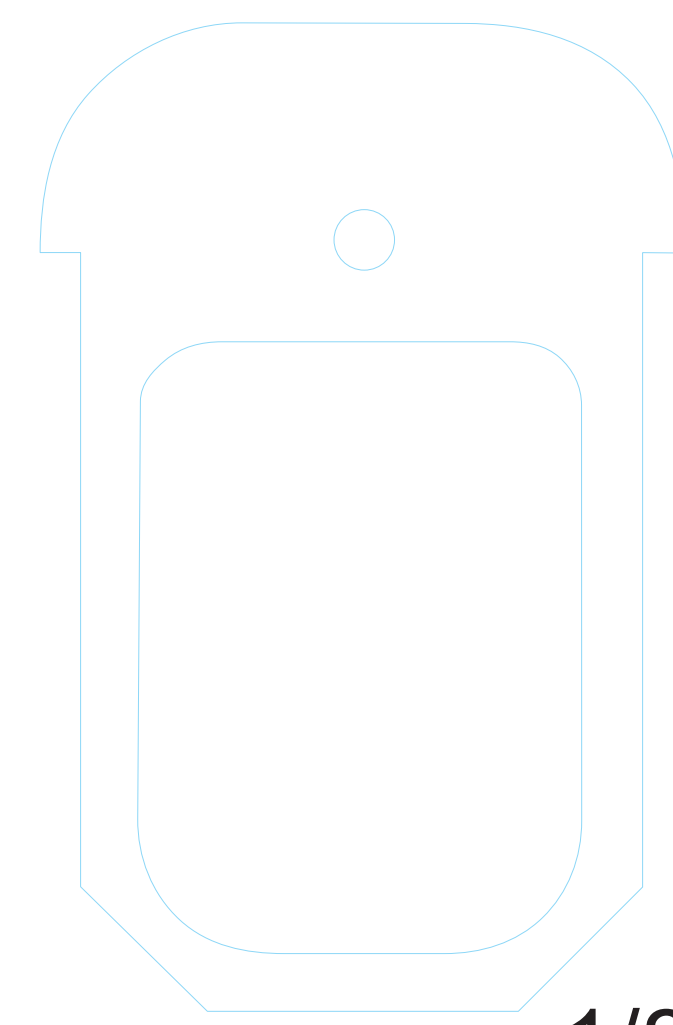





1/4" PLY  
Firewall



1/8" PLY  
Formers (2)

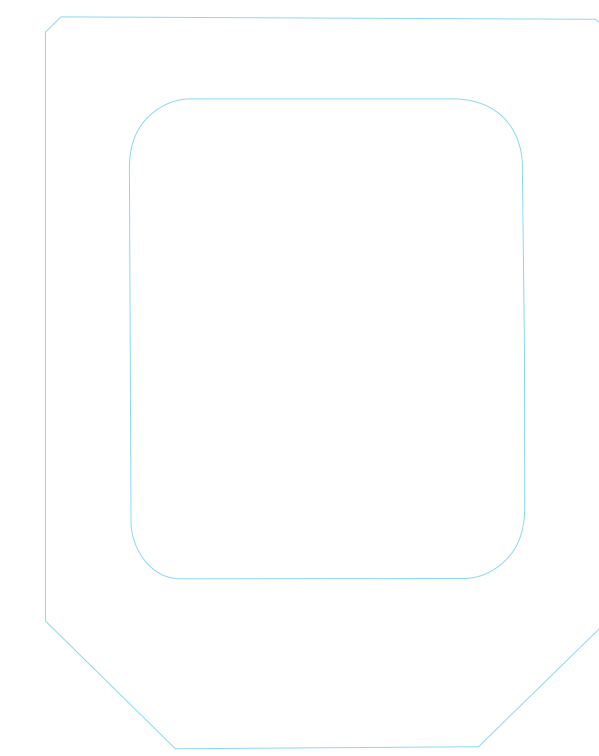

1/8" PLY LG Mount (2)

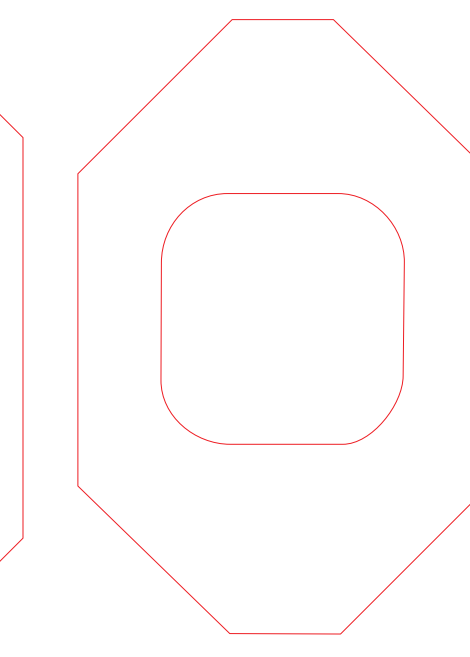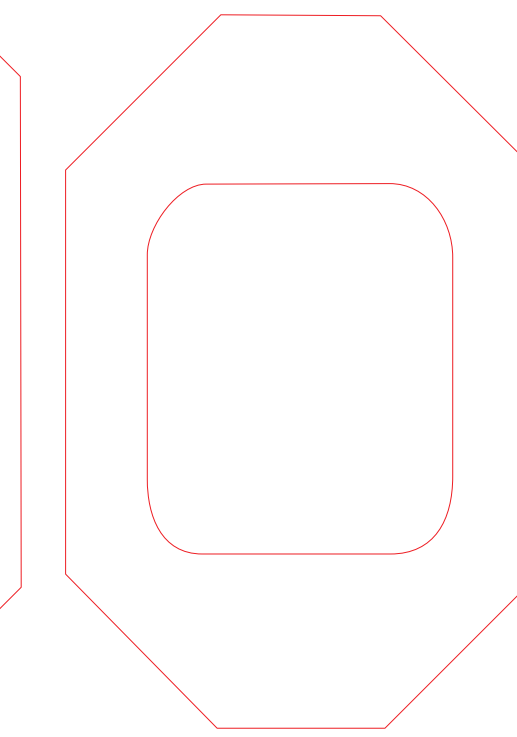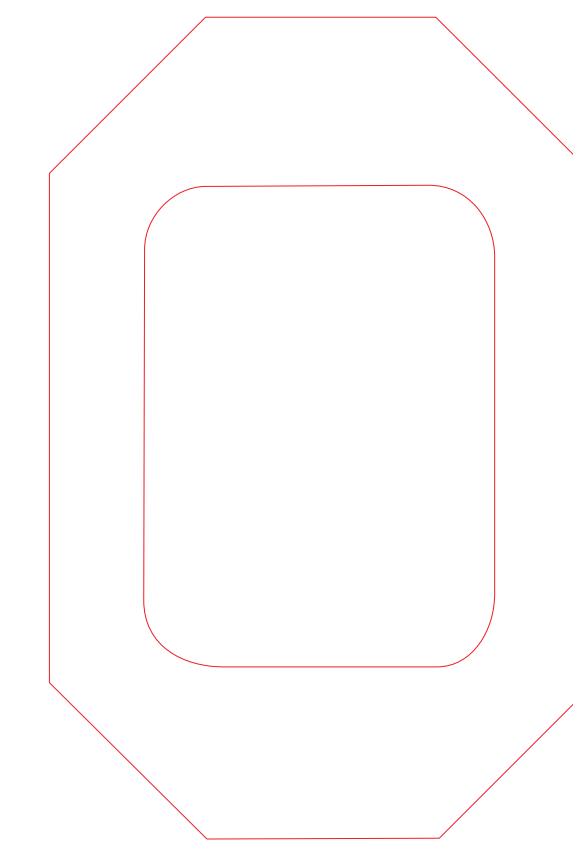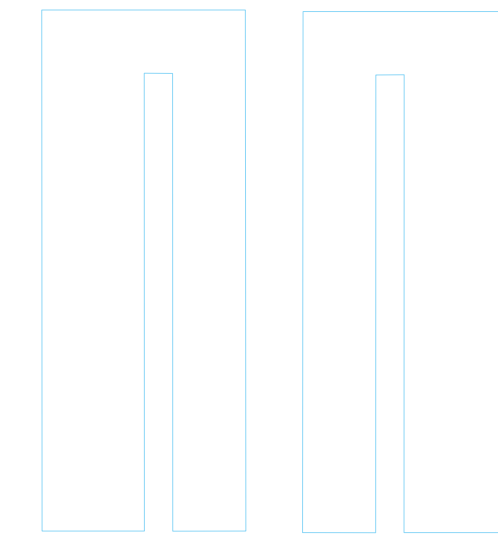


1/8" Balsa  
Formers (3)

# Strikemaster Short Kit Parts



1/4" Balsa Tail Parts

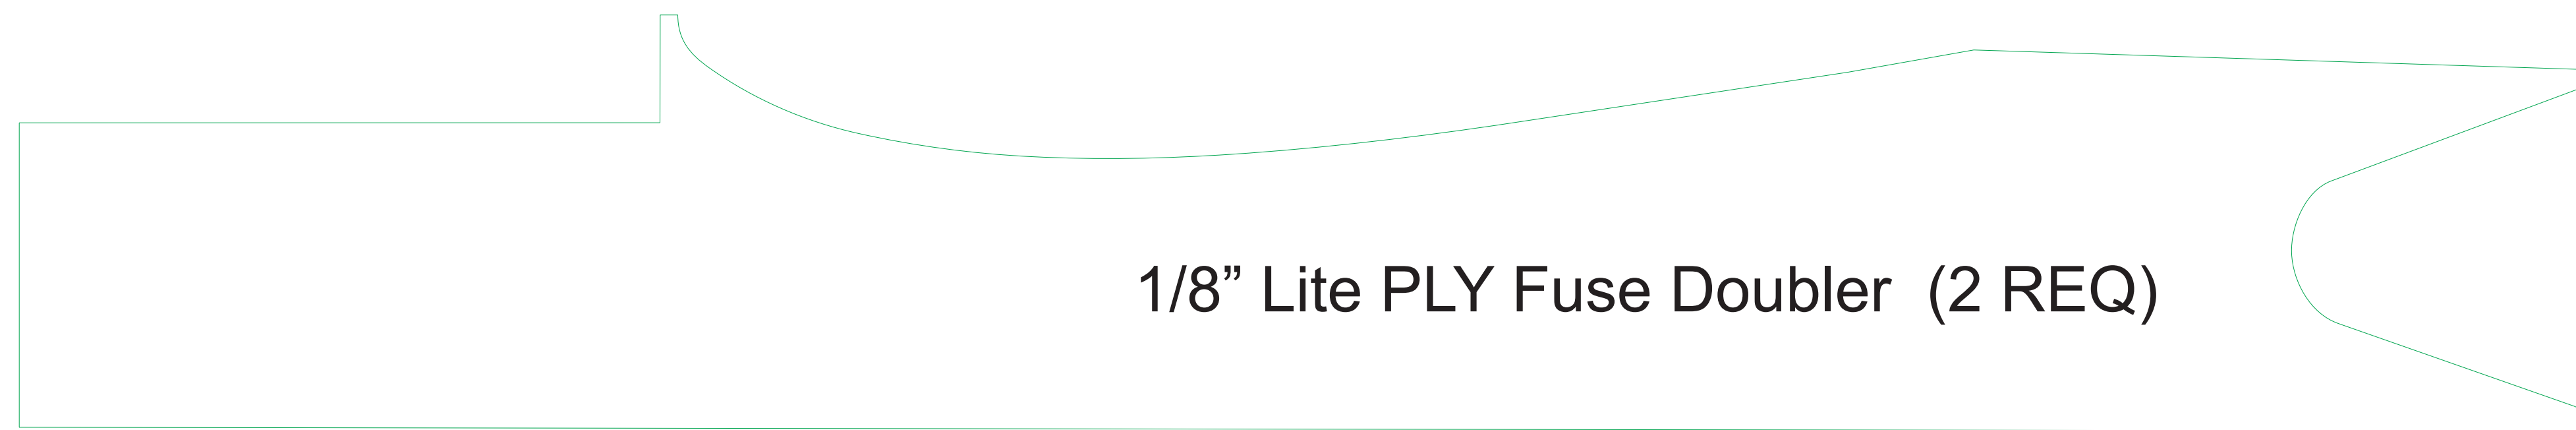


1/8" Lite PLY Fuse Doubler (2 REQ)

1/8" Lite PLY doubler replaces the 1/16" Balsa Doubler and the 1/32" Ply doubler. Leave of the 1/16" x 3/4" spacers at rear of fuse.

2 - Foam Wings

Parts may be split to fit on sheets

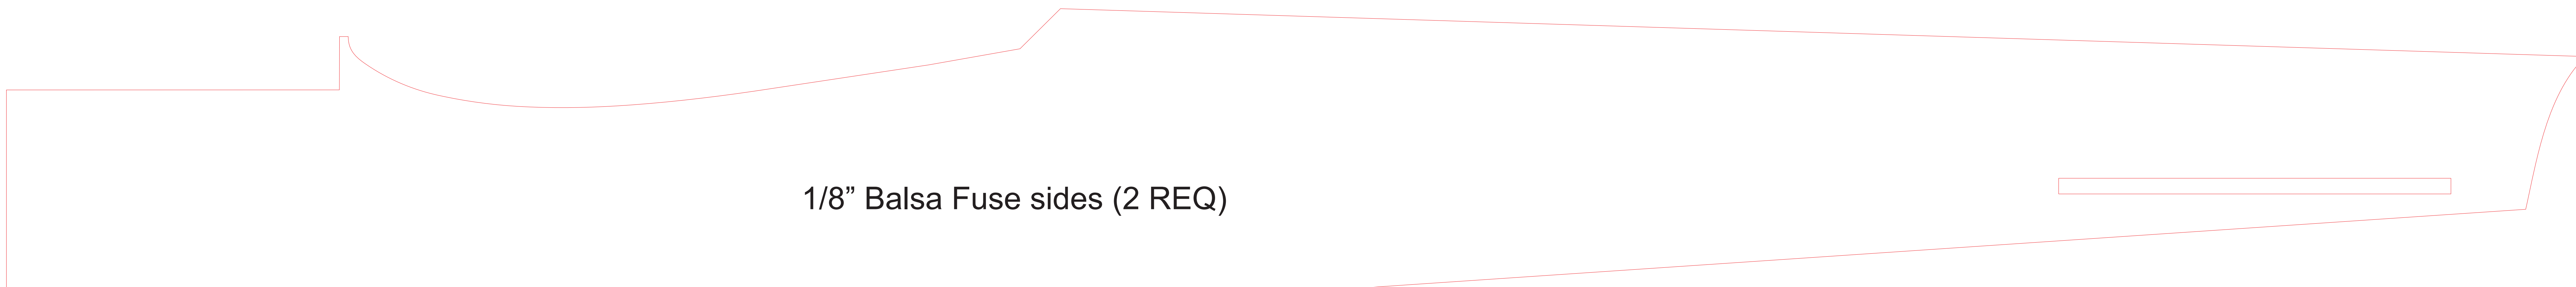

1/8" Balsa Fuse sides (2 REQ)